



**Note: For drivers with PUL+ and DIR+, connect those to +5V on controller board. Those with DIR-, connect it to DIR on the controller board and for PUL, connect to PUL- on controller board*

LightObject T9 Connection Diagram for 2 Phase Motor Driver

