


1. Specification: 4 Channel (RF4A IC: 1527)

Date: 9/6-2009

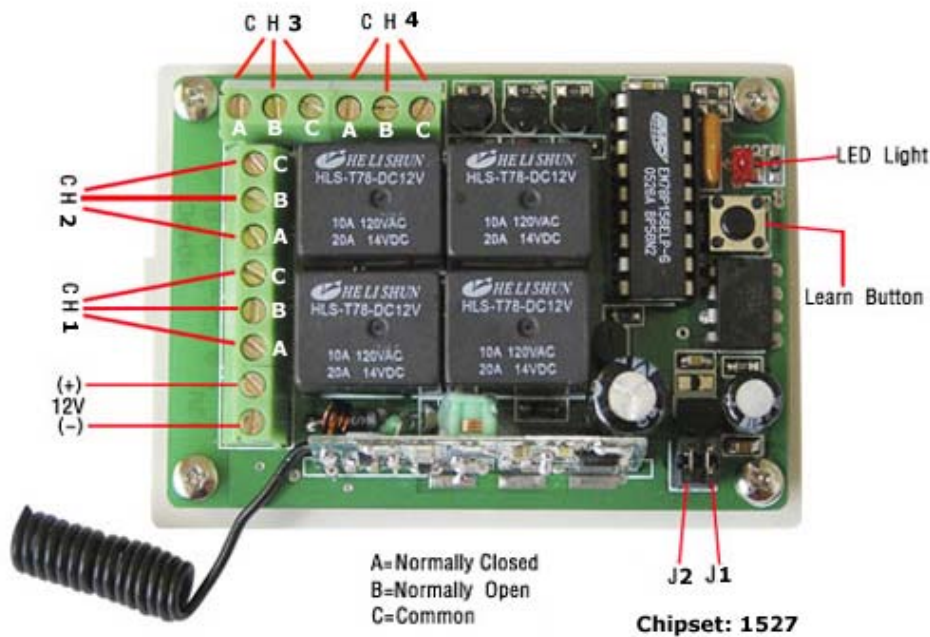

Lightobject.com
Ames Depot Inc.

Table 1. Receiver Board

| | Description | Value |
|---|-----------------------|--------------------------|
| 1 | Supply Voltage | 12V DC |
| 2 | Static Current | =< 6mA |
| 3 | Frequency | 433 MHz |
| 4 | IC chipset | 1527 |
| 5 | Sensitivity | >= -105 dB |
| 6 | Relay Spec. | 7A, 120VAC 7A, 24V DC |
| 7 | Operating Temperature | -40 to 80 deg C |
| 8 | Dimension (w, h, d) | 2.2cm, 3cm, 1.1cm |
| 9 | Weight (with housing) | 2.5 oz |

Table 2. Transmitter (Remote)

| | Description | Value |
|---|-----------------------|---------------------|
| 1 | Battery Voltage | 12V (1 piece) |
| 2 | Dimension (w, h, d) | 1.5cm, 2.5cm, 0.5cm |
| 3 | Weight (with battery) | 1.2 oz |
| 4 | Range | 150 m |

2. Procedure to Learn and Erase Codes

- a) Adjust jumper according to table 3 to select Output modes.
- b) Press the “Learn” button on the receiver board, the LED will blink one time indicating that the receiver is ready and waiting to learn from a transmitter. Press any button on the remote unit (TX) and wait for 3 blinks from the LED on the receiver board. The learn procedure is completed. You can add more remote by following the same procedure mentioned above.
- c) In case a remote is lost and a new remote is to be learned, press “Learn” button for ~10sec until the LED blinks 3 times, which indicates previous learned codes have been erased.

Table 3. Output Mode selection.

| | J1 | J2 | Output Mode |
|-----|-------|-------|---|
| i | Open | Open | Momentary |
| ii | Open | Short | Toggle (Ch1~Ch4 work independent |
| iii | Short | Open | Latched. It can be released only other channel is press |
| iv | Short | Short | Ch1, Ch2: Toggle Ch3, Ch4: Momentary |