

RF4A (4 channel RF Tx/Rx Control system)

1. Specification: 4 Channel (RF4A)

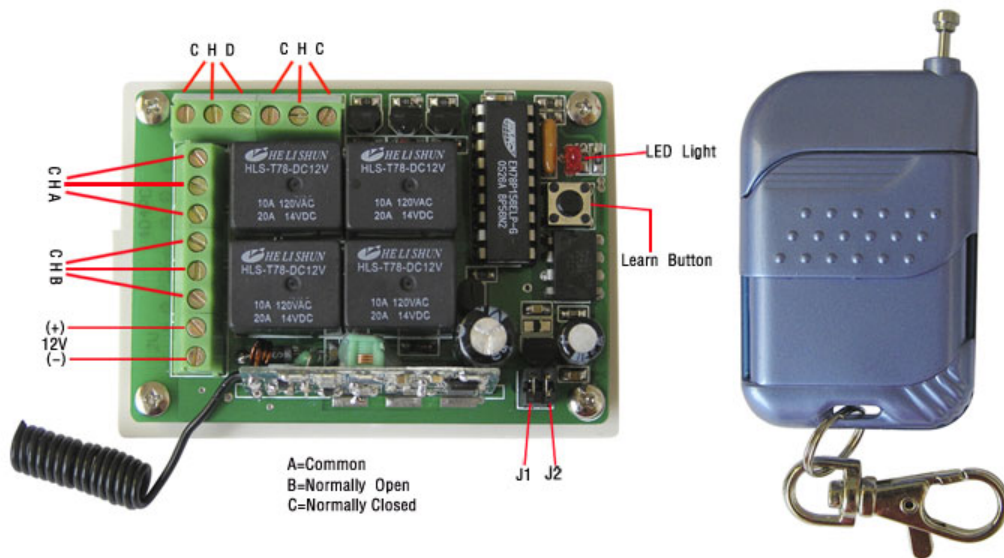


Table 1. Receiver Board

	Description	Value
1	Supply Voltage	12V DC
2	Static Current	=< 6mA
3	Frequency	315 MHz
4	Sensitivity	>= -105 dB
5	Relay Spec.	10A, 120VAC 10A, 24V DC
6	Operating Temperature	-40 to 80 deg C
7	Dimension (w, h, d)	2.2cm, 3cm, 1.1cm
8	Weight (with housing)	2.5 oz

Table 2. Transmitter (Remote)

	Description	Value
1	Battery Voltage	12V (1 piece)
2	Dimension (w, h, d)	1.5cm, 2.5cm, 0.5cm
3	Weight (with battery)	1.2 oz
4	Range	200 m

2. Procedure to Learn and Erase Codes

- Press the “Learn” button on the receiver board, the LED will blink indicating the receiver is ready and waiting to learn from transmitter.
- Adjust jumper according to table 3 to select Output modes.
- In case a remote is lost and a new remote is to be learned, press “Learn” button for ~10sec until the LED blinks 3 times, which indicates previous learned codes have been erased.

Table 3. Output Mode selection.

	J2	J1	Output Mode
i	Open	Short	Momentary
ii	Short	Short	Toggle
iii	Open	Open	Latched
iv	Short	Open	ChA, ChB: Momentary ChC, ChD: Toggle

3. Encode/Decode:

On receiver board Auto Learning Decoding Scheme has been programmed into the MCU IC chip, and inside the remote control there is an Encoding IC Chip, 2262. This set of IC Chips can be used to encode your remote signals so if more than one remote system are placed close together, they won't interfere each other. You only need to do little soldering work on the 2262 IC. Pin #1 through Pin #8 bring out the Encode function of your remote transmitter. The receiver board will automatically learn from Transmitter by pressing a learn button. There are $\{3 \text{ to the power } 8\} = 6561$ different combinations for encoding/decoding, isn't it cool?


On the back of the board there should be labels like:

" L" ----- Stands for Low digital state(Close to GND level).

" H" ----- Stands for High digital state(9-12V).

" 1" ----- Indicates this is Pin #1.

" 8" ----- Indicates this is Pin #8.

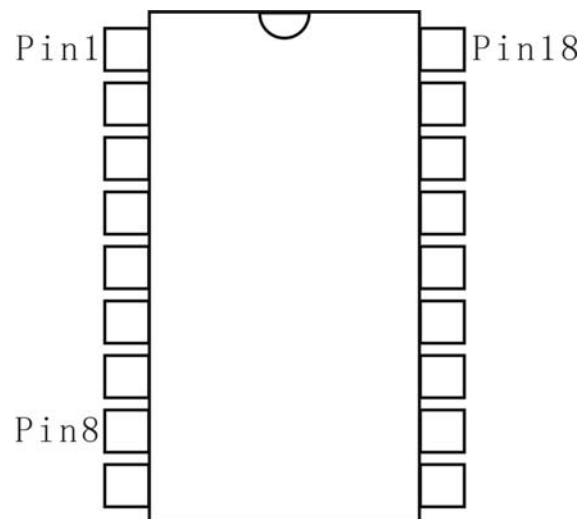

Just in case there aren't any labels printed on the PCB board, you still can easily figure out

the “L” and “H” states yourself: After power is hooked up to the system, use a Voltmeter to measure the contacts on both sides of the column of eight pins. Voltage level on each side should be consistence. If one side is “H”, the other side should be “L”. “H” level voltage can be measured only when signal is transmitting/receiving.

To figure out Pin #1, look at the front side of 2262 IC Chip. Pin #1 is the first pin on the left side of the dent.

You don't have to connect all eight pins to High or Low, even only one pin to H or L will do the encoding/decoding.

*Note: Sometimes remotes are default encoded to be 00000001, pin 8 is shorted to GND.

Encoded IC has following representation:

If the pin is not shorted to anything, its code value is “0”.

If the pin is shorted to “L”, its code value is “1”,

If the pin is shorted to “H”, its code value is a “2”.